


# Bike rack assembly 700-4

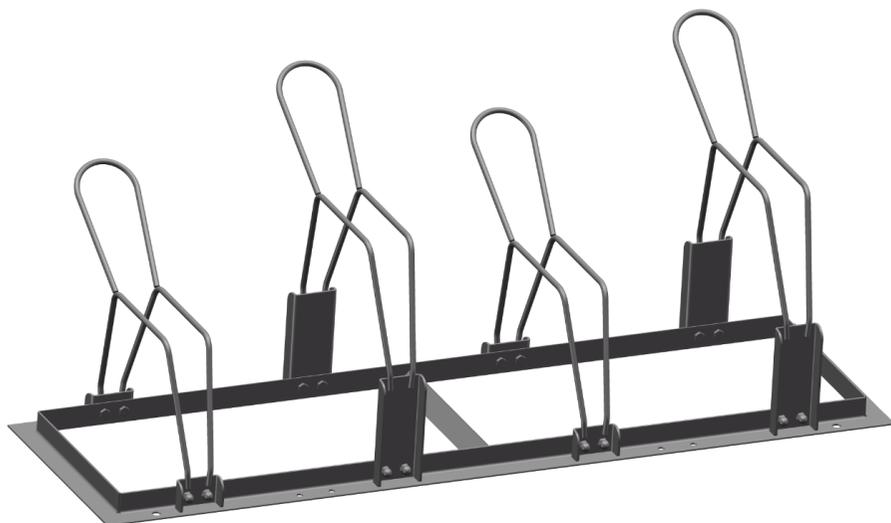


## Step 1, Assemble the wheel holders

### Parts


- 1x "30068" (frame for 23bikes)
- 2x "20114" (low wheel holder)
- 2x "20113" (high wheel holder)
- 16x Bolt M10 x 20 mm
- 16x M10 nut
- 4 of the nuts can be replaced with security nuts

1:1-1:2, Assemble the parts. NB: low wheel holder on the left


1:3, Tighten the nuts with a nutrunner

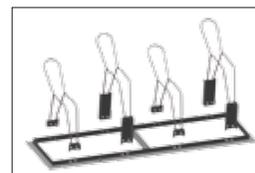


1:1

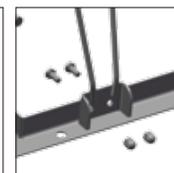

1:2

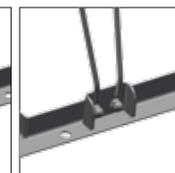

1:3

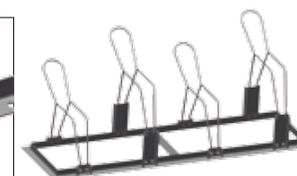

## Tools required

1. Metal drill bit  $\varnothing 10$  mm
2. Concrete drill bit  $\varnothing 8$  mm
3. Socket wrenches 16 and 17

4. Ring spanners 16 and 17
5. Nutrunner
6. Hammer drill for fastening to floor

4 - 1

4 - 2


## Step 2, Bolt to the floor

Parts



Complete bike rack  
4x bolt (bolt type depends  
on floor material) to bolt to  
the floor



2:1

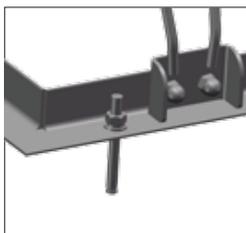

2:2

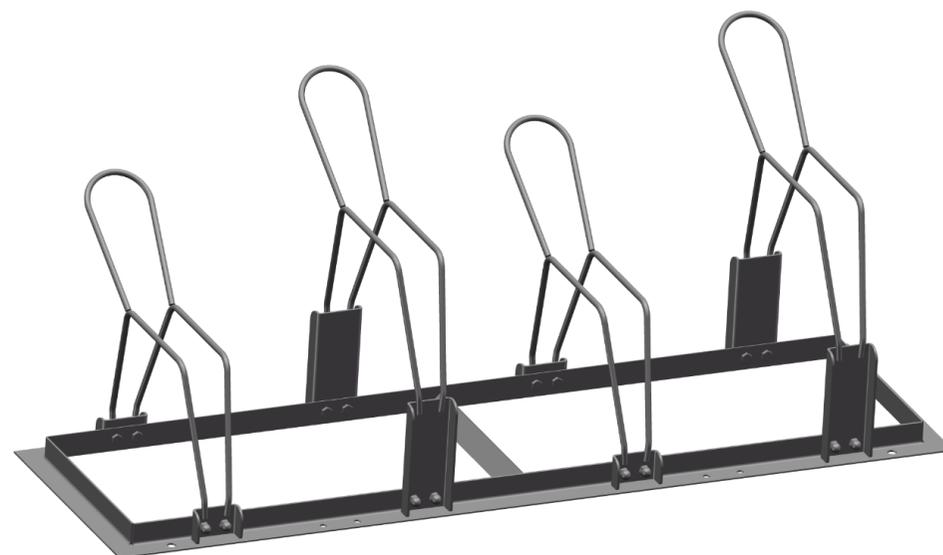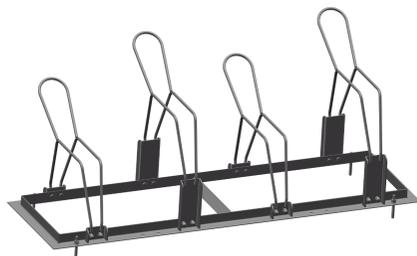

# Done!

4 - 4