


Bike rack assembly 900-2



Tools required

- | | |
|------------------------------|--|
| 1. Metal drill bit ø10 mm | 4. Ring spanners 16 and 17 |
| 2. Concrete drill bit ø8 mm | 5. Nutrunner |
| 3. Socket wrenches 16 and 17 | 6. Hammer drill for fastening to floor |



2 - 1



Step 1, Bolt to the wall

Parts

Complete bike rack
4x bolt (bolt type depends on
floor material) to bolt to the
floor

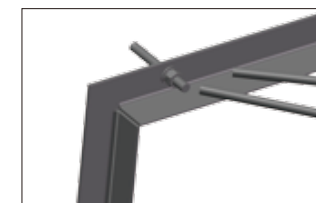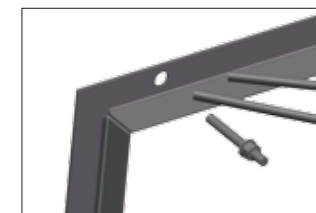

2 - 2