


Bike rack assembly 800-2 W

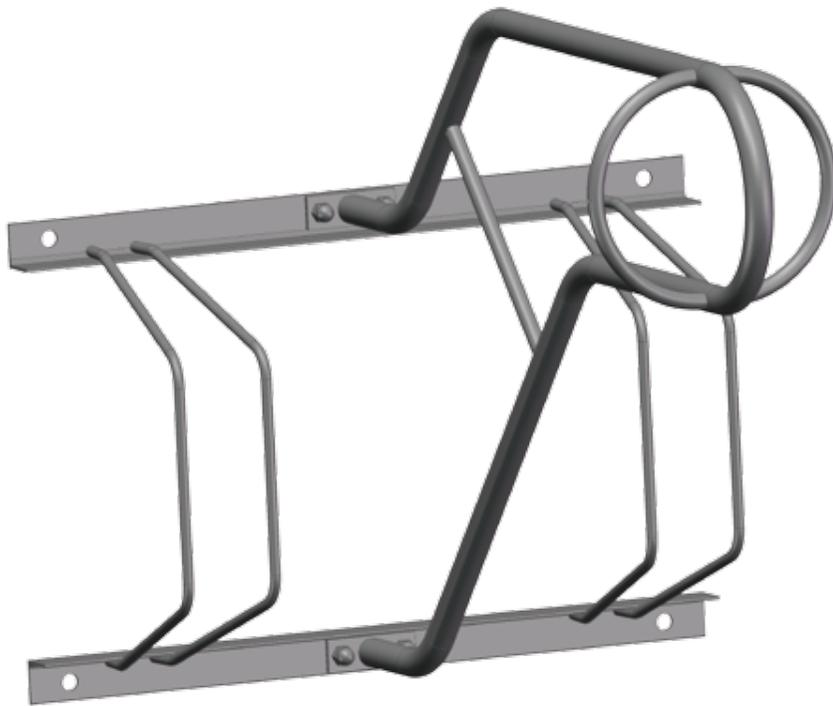

4 - 1

Tools required

1. Metal drill bit $\varnothing 10$ mm
2. Concrete drill bit $\varnothing 8$ mm
3. Socket wrenches 16 and 17
4. Ring spanners 16 and 17
5. Nutrunner
6. Hammer drill for fastening to floor



4 - 2

Step 1, Assemble safety bar

Parts

1x " 20168"

1x "30233" (safety bar)

4x Bolt M10 x 20 mm

4x M10 nut


1 of the nuts can be replaced with a security nut

1:1-1:2, Assemble the parts


1:3, Tighten the nuts with a nutrunner



1:1

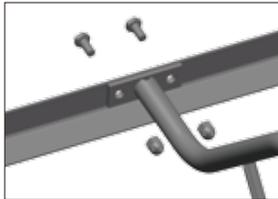

1:2

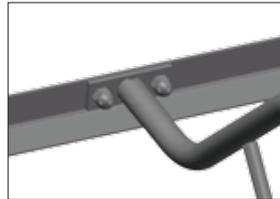


1:3

Step 2, Bolt to the wall


Parts

Complete bike rack

4x bolt (bolt type depends on floor material) to bolt to the floor

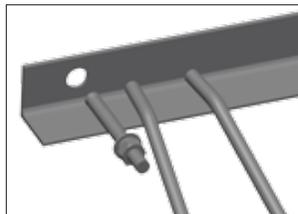


2:1

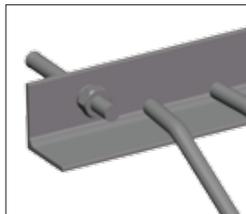

2:2

4 - 3

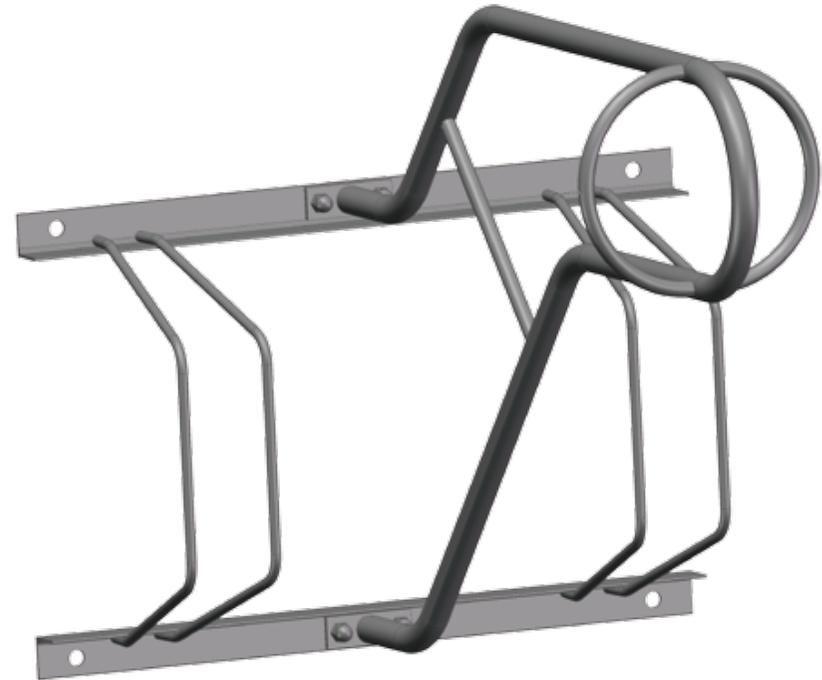

Done!

4 - 4