


# Bike rack assembly 900-3



## Tools required

1. Metal drill bit ø10 mm
2. Concrete drill bit ø8 mm
3. Socket wrenches 16 and 17


4. Ring spanners 16 and 17
5. Nutrunner
6. Hammer drill for fastening to floor

2 - 1

## Step 1, Bolt to the wall

Parts

Complete bike rack  
4x bolt (bolt type depends on floor material) to bolt to the floor

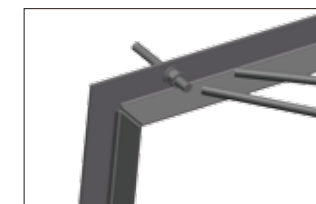

2 - 2