


Bike rack assembly 700-5 W

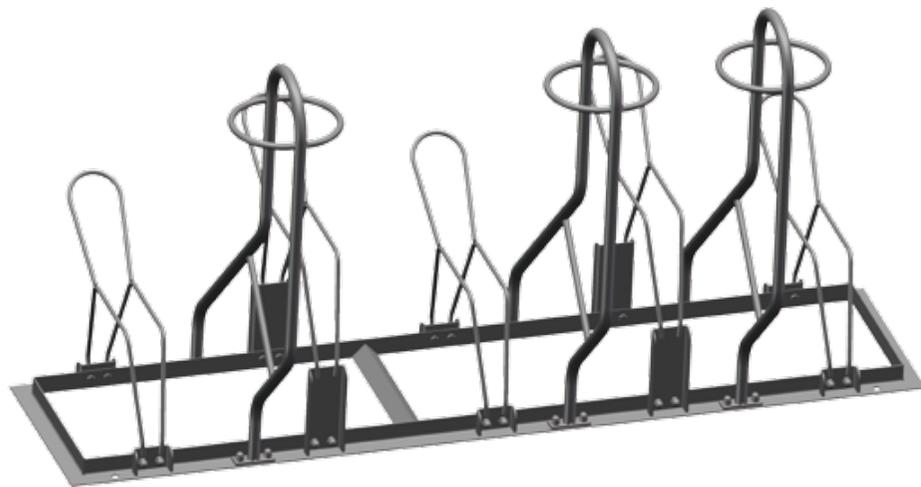



Step 1, Montera hjulhållarna

Delar


- 1x "30071" (frame for 5 bikes)
- 3x "20114" (low wheel holder)
- 2x "20113" (high wheel holder)
- 20x Bolt M10 x 20 mm
- 20x M10 nut
- 5 of the nuts can be replaced with security nuts

1:1-1:2, Assemble the parts. NB: low wheel holder on the left


1:3, Tighten the nuts with a nutrunner

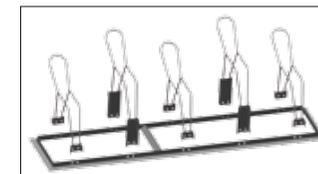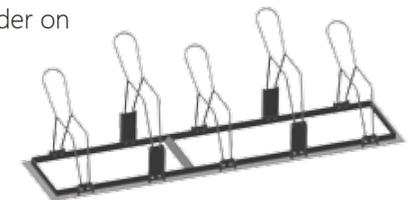

1:1

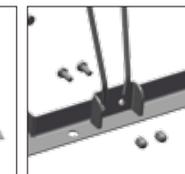

1:2

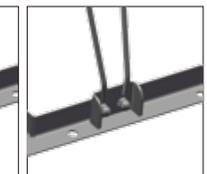

1:3

Tools required

- 1. Metal drill bit ø10 mm
- 2. Concrete drill bit ø8 mm
- 3. Socket wrenches 16 and 17

- 4. Ring spanners 16 and 17
- 5. Nutrunner
- 6. Hammer drill for fastening to floor

4 - 1

4 - 2

Step 2, Assemble safety bar

Parts

Parts from step 1

3x "30233" (safety bar)


12x Bolt M10 x 20 mm

12x M10 nut

3 of the nuts can be replaced with a security nut

2:1-2:2, Assemble the parts

2:3, Tighten the nuts with a nutrunner

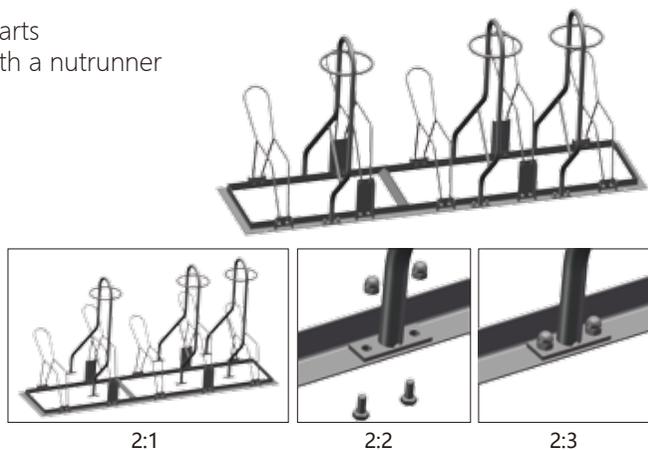


Step 3, Bolt to the floor


Parts

Complete bike rack

4x bolt (bolt type depends on floor material) to bolt to the floor

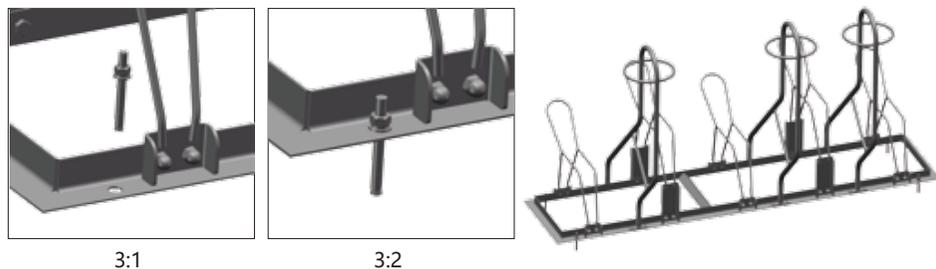

4 - 3

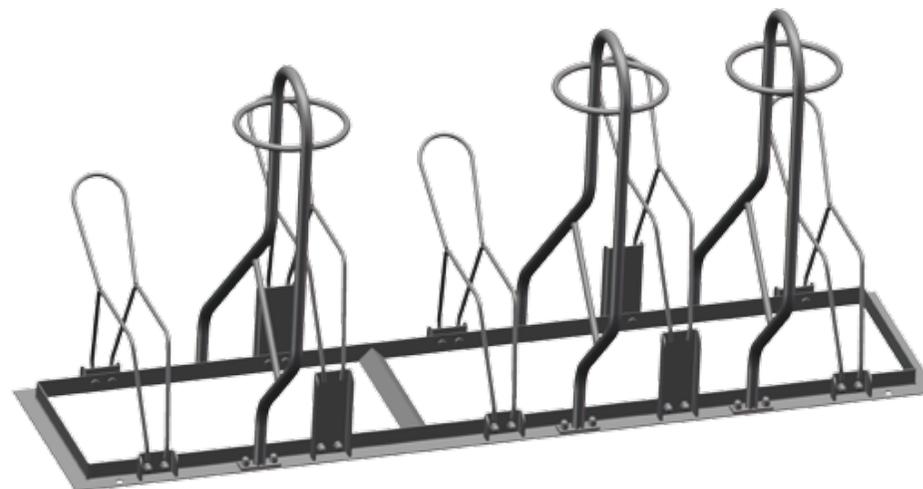

Done!

4 - 4