


# Bike rack assembly 600-4

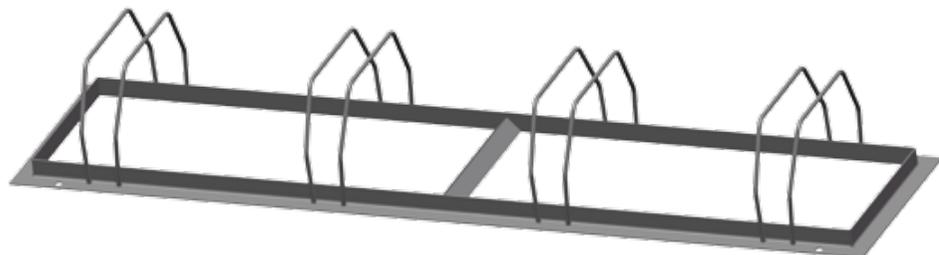

## Tools required

- 1. Metal drill bit ø10 mm
- 2. Concrete drill bit ø8 mm
- 3. Socket wrenches 16 and 17
- 4. Ring spanners 16 and 17
- 5. Nutrunner
- 6. Hammer drill for fastening to floor

### Step 1, Bolt to the wall

#### Parts

Complete bike rack  
 4x screws (type is dependant  
 on the material in the floor).  
 Drilled to floor.

