

Bike rack assembly 700-2 W



Tools required

1. Metal drill bit $\varnothing 10$ mm
2. Concrete drill bit $\varnothing 8$ mm
3. Socket wrenches 16 and 17

4. Ring spanners 16 and 17
5. Nutrunner
6. Hammer drill for fastening to floor

4 - 1




Step 1, Assemble the wheel holders

Parts


- 1x "30176" (ram för 2 cyklar)
- 1x "20114" (låg hjulhållare)
- 1x "20113" (hög hjulhållare)
- 8x Skruv M10 x 20 mm
- 8x M10 mutter
- 2 st av muttrarna kan ersättas med säkerhetsmutter

1:1-1:2, Assemble the parts. NB: low wheel holder on the left


1:3, Tighten the nuts with a nutrunner

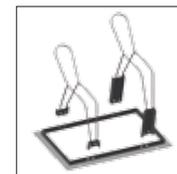

1:1

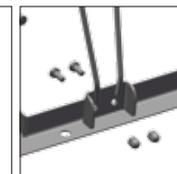

1:2

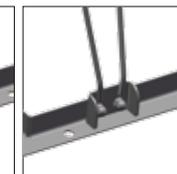

1:3



4 - 2

Step 2, Assemble safety bar

Parts

Parts from step 1

1x "30233" (safety bar)


4x Bolt M10 x 20 mm

4x M10 nut

1 of the nuts can be replaced with a security nut

2:1-2:2, Assemble the parts

2:3, Tighten the nuts with a nutrunner

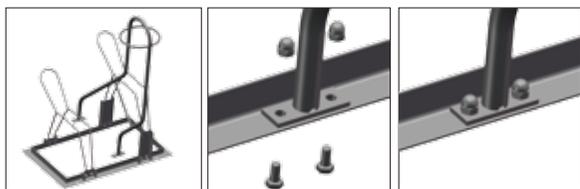

2:1

2:2

2:3




Step 3, Bolt to the floor

Parts

Complete bike rack

4x bolt (bolt type depends on floor material) to bolt to the floor

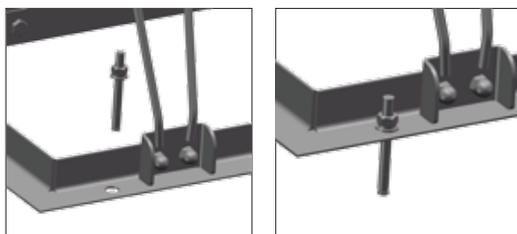

3:1

3:2



Done!

4 - 4

4 - 3