


Bike rack assembly 700-4 W

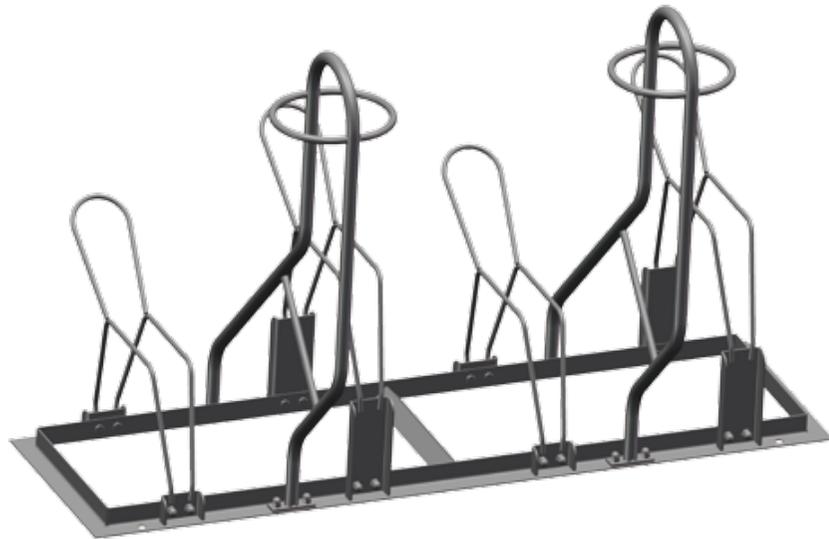


Step 1, Assemble the wheel holders

Parts


- 1x "30068" (frame for 23bikes)
- 2x "20114" (low wheel holder)
- 2x "20113" (high wheel holder)
- 16x Bolt M10 x 20 mm
- 16x M10 nut
- 4 of the nuts can be replaced with security nuts

1:1-1:2, Assemble the parts. NB: low wheel holder on the left


1:3, Tighten the nuts with a nutrunner

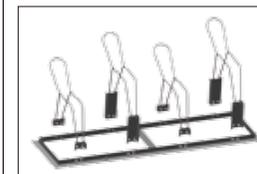


1:1

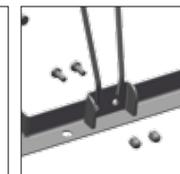

1:2

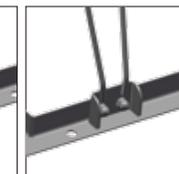

1:3

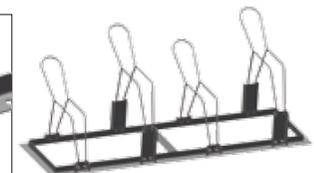

Tools required

- 1. Metal drill bit ø10 mm
- 2. Concrete drill bit ø8 mm
- 3. Socket wrenches 16 and 17

- 4. Ring spanners 16 and 17
- 5. Nutrunner
- 6. Hammer drill for fastening to floor

4 - 1


4 - 2

Step 2, Assemble safety bar


Parts

- Parts from step 1
- 2x "30233" (safety bar)
- 8x Bolt M10 x 20 mm
- 8x M10 nut
- 2 of the nuts can be replaced with a security nut


- 2:1-2:2, Assemble the parts
- 2:3, Tighten the nuts with a nutrunner

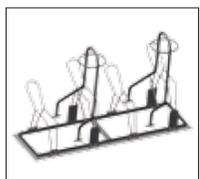


2:1

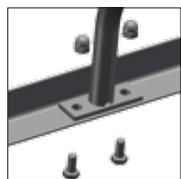

2:2

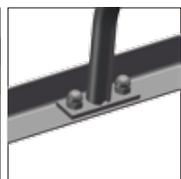


2:3

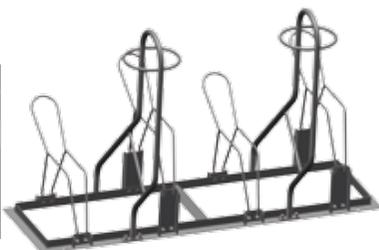


Step 3, Bolt to the floor

Parts



- Complete bike rack
- 4x bolt (bolt type depends on floor material) to bolt to the floor

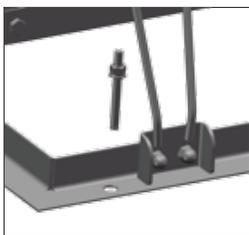

3:1

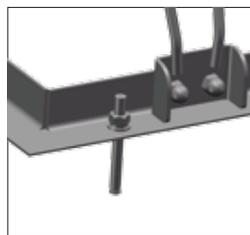

3:2

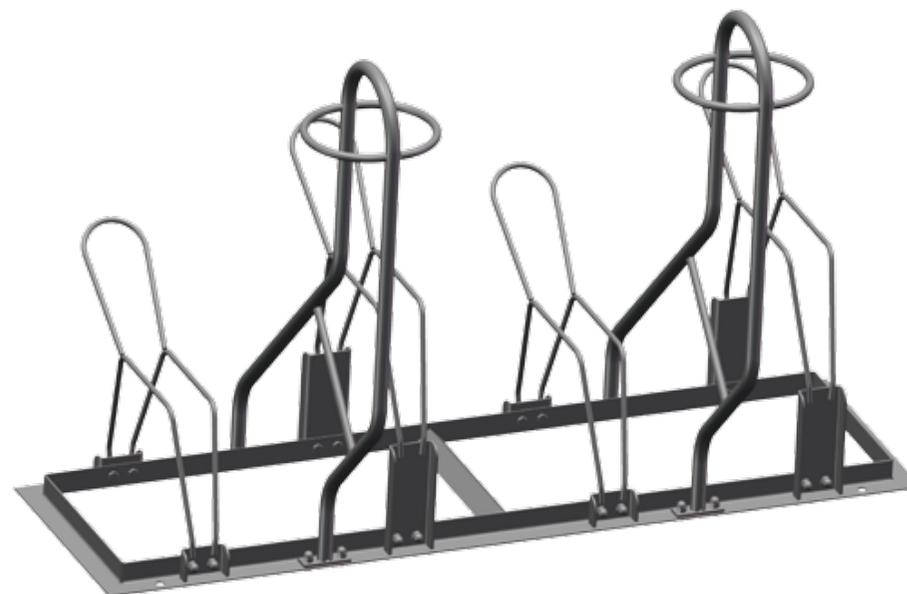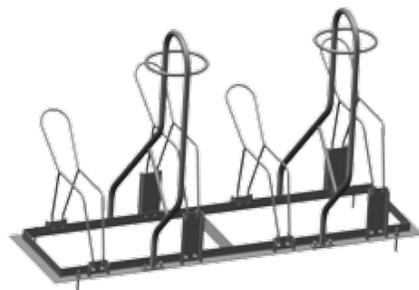

Done!

4 - 4

4 - 3