



Bike rack assembly 900-5



Step 1, Bolt to the wall

Parts

Complete bike rack
4x bolt (bolt type depends on
floor material) to bolt to the
floor

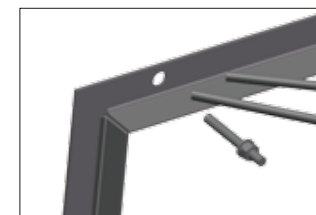

Tools required

1. Metal drill bit ø10 mm
2. Concrete drill bit ø8 mm
3. Socket wrenches 16 and 17

4. Ring spanners 16 and 17
5. Nutrunner
6. Hammer drill for fastening to floor

2 - 1

2 - 2