

Bike rack assembly 700-3




Step 1, Assemble the wheel holders

Parts


- 1x "30177" (frame for 23bikes)
- 2x "20114" (low wheel holder)
- 1x "20113" (high wheel holder)
- 12x Bolt M10 x 20 mm
- 12x M10 nut
- 3 of the nuts can be replaced with security nuts

1:1-1:2, Assemble the parts. NB: low wheel holder on the left


1:3, Tighten the nuts with a nutrunner

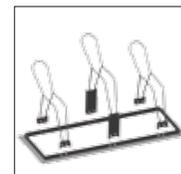

1:1

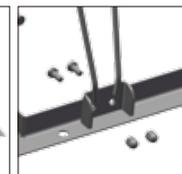

1:2

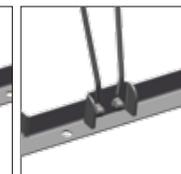

1:3



4 - 2

Tools required

- 1. Metal drill bit $\varnothing 10$ mm
- 2. Concrete drill bit $\varnothing 8$ mm
- 3. Socket wrenches 16 and 17
- 4. Ring spanners 16 and 17
- 5. Nutrunner
- 6. Hammer drill for fastening to floor

4 - 1

Step 2, Bolt to the floor

Parts

Complete bike rack
4x bolt (bolt type depends on
floor material) to bolt to the
floor



2:1



2:2



Done!

4 - 4