


Bike rack assembly 10-5

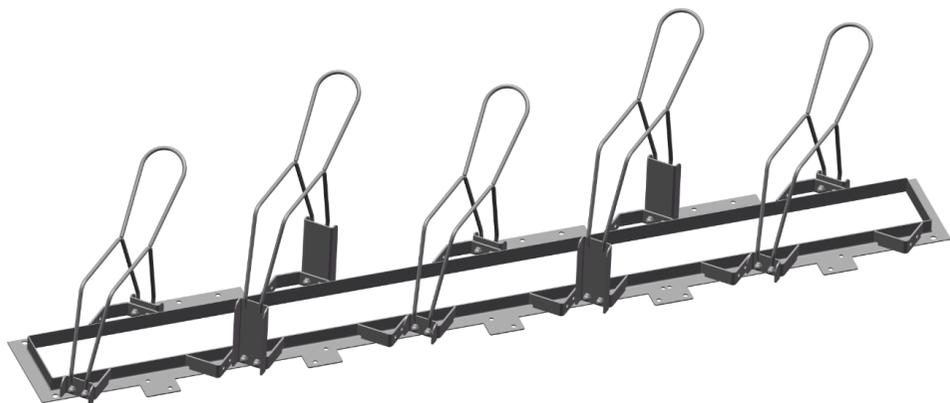

Tools required

- | | |
|--|--|
| 1. Metal drill bit $\varnothing 10$ mm | 4. Ring spanners 16 and 17 mm |
| 2. Concrete drill bit $\varnothing 8$ mm | 5. Nutrunner |
| 3. Socket wrenches 16 and 17 mm | 6. Hammer drill for fastening to floor |

4 - 1




Step 1, Assemble the wheel holders

Parts


- 1x "171196" (10-5)
- 1x "20114" (low wheel holder)
- 2x "20113" (high wheel holder)
- 20x Bolt M10 x 20 mm
- 20x M10 nut
- 5 of the nuts can be replaced with security nuts

1:1-1:2, Assemble the parts. NB: low wheel holder on the left


1:3, Tighten the nuts with a nutrunner

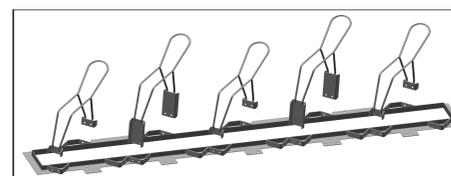

1:1

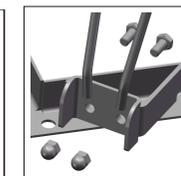

1:2

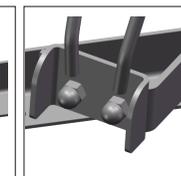



1:3

4 - 2


Step 2, Bolt to the floor

Parts


Complete bike rack
4x bolt (bolt type depends on
floor material) to bolt to the floor

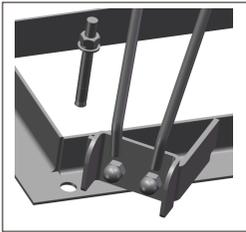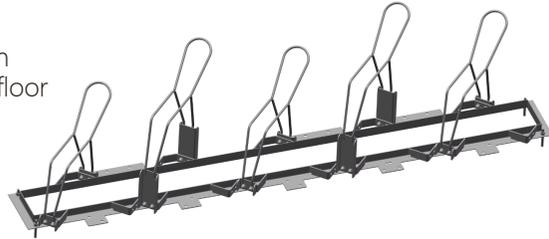

2:1

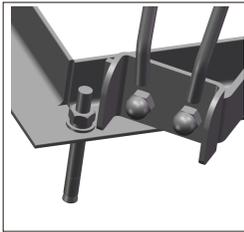

2:2

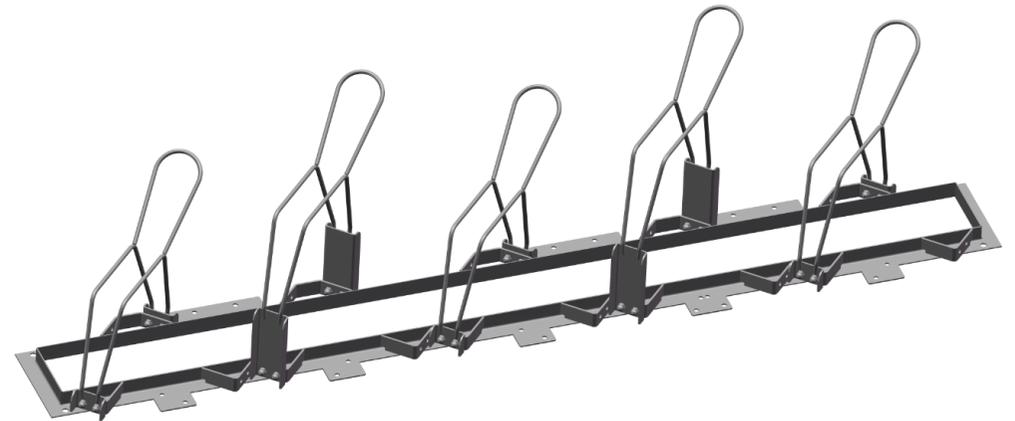

Done!

4 - 4