


# Bike rack assembly 800-3W



## Tools required

1. Metal drill bit  $\varnothing 10$  mm
2. Concrete drill bit  $\varnothing 8$  mm
3. Socket wrenches 16 and 17
4. Ring spanners 16 and 17
5. Nutrunner
6. Hammer drill for fastening to floor

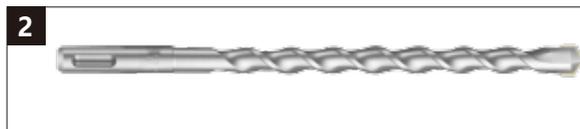

### Step 1, Assemble safety bar


Parts

- 1x " 20169"
- 2x "30233" (safety bar)
- 8x Bolt M10 x 20 mm
- 8x M10 nut
- 2 of the nuts can be replaced with a security nut


1:1-1:2, Assemble the parts  
1:3, Tighten the nuts with a nutrunner



1:1

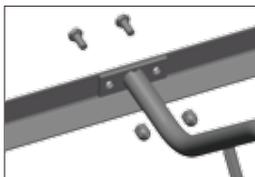

1:2

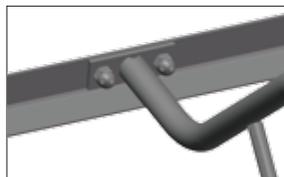


1:3


### Step 2, Bolt to the wall

Parts

- Complete bike rack
- 4x bolt (bolt type depends on floor material) to bolt to the floor

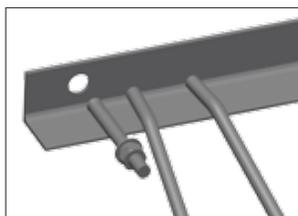

2:1

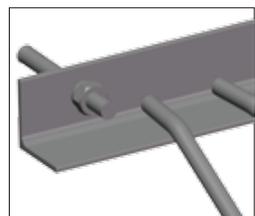

2:2

4 - 3



# Done!

4 - 4