

Bike rack assembly 800-3



Tools required


- | | |
|--|--|
| 1. Metal drill bit $\varnothing 10$ mm | 4. Ring spanners 16 and 17 |
| 2. Concrete drill bit $\varnothing 8$ mm | 5. Nutrunner |
| 3. Socket wrenches 16 and 17 | 6. Hammer drill for fastening to floor |




Step 1, Bolt to the wall

Parts


Complete bike rack
4x bolt (bolt type depends on
floor material) to bolt to the
floor

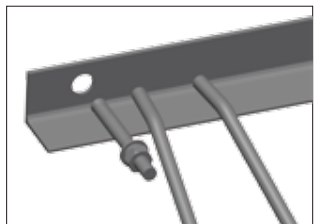

1:1

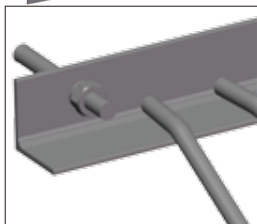

1:2

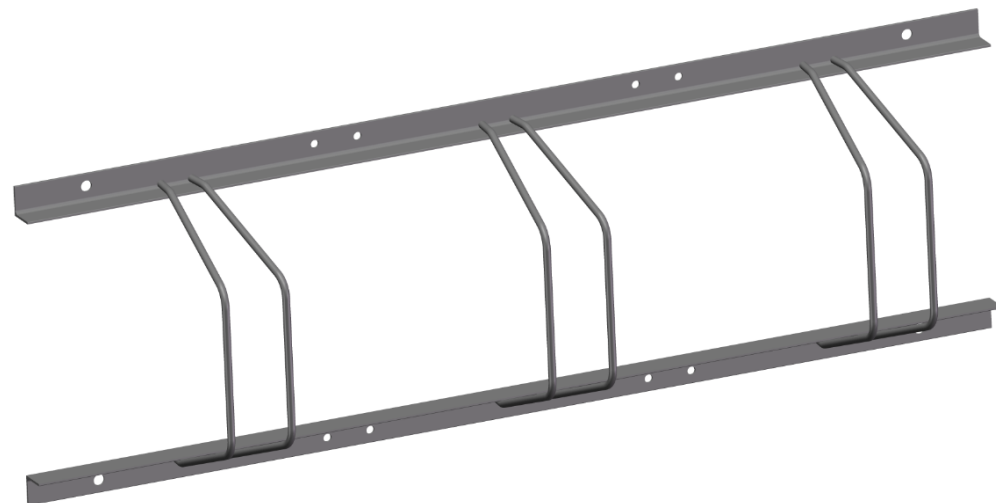

Done!