


Bike rack assembly 10-3

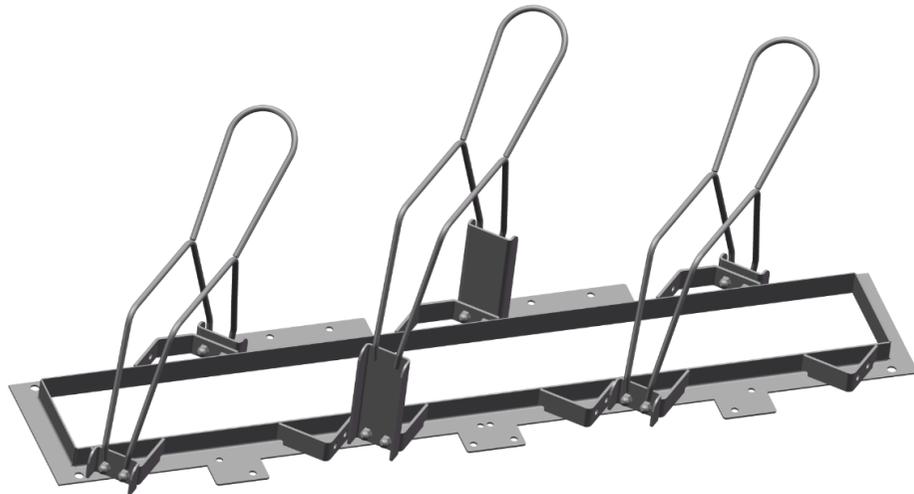

Tools required

1. Metal drill bit $\varnothing 10$ mm
2. Concrete drill bit $\varnothing 8$ mm
3. Socket wrenches 16 and 17 mm
4. Ring spanners 16 and 17 mm
5. Nutrunner
6. Hammer drill for fastening to floor

4 - 1




Step 1, Assemble the wheel holders


Parts

- 1x "171195" (10-3)
- 1x "20114" (low wheel holder)
- 1x "20113" (high wheel holder)
- 12x Bolt M10 x 20 mm
- 12x M10 nut
- 3 of the nuts can be replaced with security nuts


- 1-1:2, Assemble the parts. NB: low wheel holder on the left
- 1:3, Tighten the nuts with a nutrunner

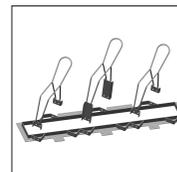


1:1

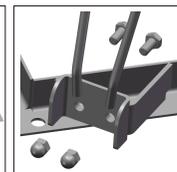

1:2

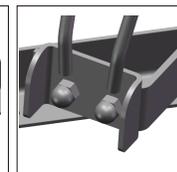

1:3

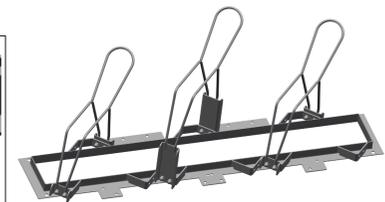


4 - 2


Step 2, Bolt to the floor

Parts



Complete bike rack
4x bolt (bolt type depends on floor
material) to bolt to the floor

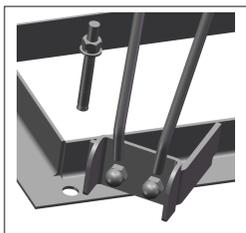

2:1

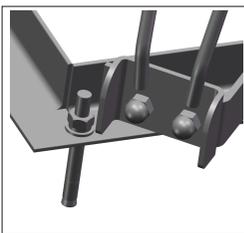

2:2

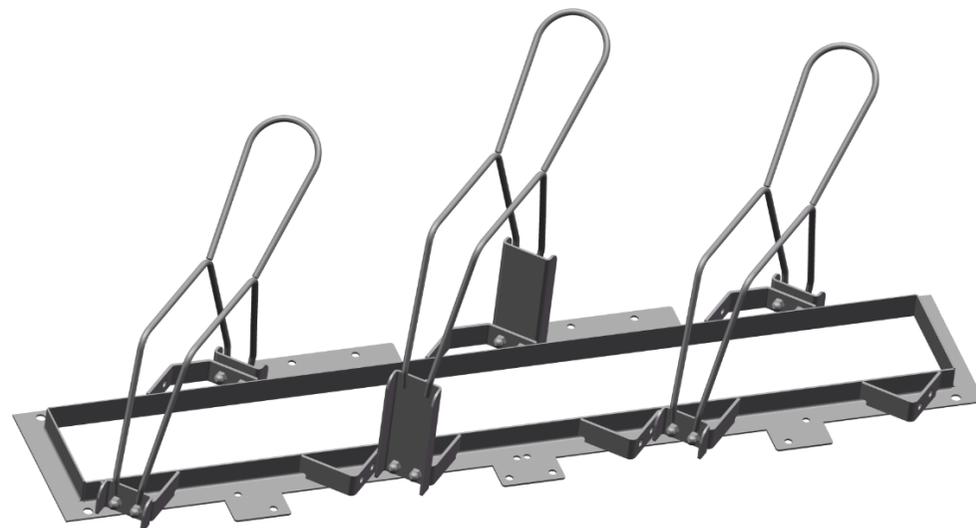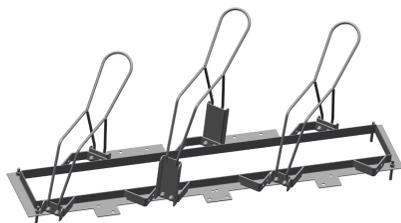

Done!

4 - 4